

# Projection Screen Care & Maintenance

## MATT WHITE & HIGH CONTRAST GREY

Clean surface with a solution of mild dishwashing liquid diluted with warm water. A 50/50 mix of Simple Green® All- Purpose Cleaner and water may also be used. Using a soft, disposable cloth, gently wipe the surface, *completely rinse the entire surface* with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use ARMOR ALL®.

## GLASS BEADED

Clean with a very soft brush or cloth and carefully dust the surface. Do not use soap, water, solvents or abrasives. Do not use ARMOR ALL®. These substances will damage a glass beaded viewing surface.

## FLEXIBLE MATT WHITE, M1300, HiDEF GREY

Clean surface with a solution of mild dishwashing liquid diluted with warm water. A 50/50 mix of Simple Green® All- Purpose Cleaner and water may also be used. Using a soft, disposable cloth, gently wipe the surface, *completely rinse the entire surface* with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use ARMOR ALL®.

## M2500

Clean with a very soft brush or cloth and carefully dust the surface. Do not use soap, water, solvents or abrasives. Do not use ARMOR ALL®.

## AT1200 & AT GREY

Clean surface with a solution of mild dishwashing liquid diluted with warm water. A 50/50 mix of Simple Green® All- Purpose Cleaner and water may also be used. Using a soft, disposable cloth, gently wipe the surface, *completely rinse the entire surface* with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Allow screen to air dry overnight in down position. Do not use cleaning solvents or abrasives. Do not use ARMOR ALL®.

## CINEFLEX

Gently clean this rear projection material with a diluted solution of mild dishwashing liquid and warm water. A 50/50 mix of Simple Green® All- Purpose Cleaner and water may also be used. Using a soft, disposable cloth, gently wipe the surface, *completely rinse the entire surface* with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use ARMOR ALL®.

## RIGID REAR SCREENS

IRUS, CINESCREENS®, both glass and acrylic, DIAMONDSCREENS™, VORTEX and HOLOVIEW screens can be cleaned with a soft, lint free cloth to remove dust from the surface. Remove soil marks with a cloth or sponge and mild soapy water. Wring free of excess moisture before applying, rinse and blot dry. Do not use solvent or abrasives. Do not use ARMOR ALL®.

## PARTS / REPAIR

Parts or service information may be obtained by contacting manufacturer direct.

# DRAPER

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
www.draperinc.com ■ fax 765-987-7142

Copyright © 2007 Draper Inc. Form Care&Maintenance\_Inst07 Printed in U.S.A.

CINESCREEN® is a registered trademark of DRAPER, INC.

SIMPLE GREEN® is a registered trademark of SUNSHINE MAKERS, INC.

ARMOR ALL® is a registered trademark of ARMOR ALL PRODUCTS CORPORATION